

1. Turn on the gamepad and connect it to the console.
2. Two ways entering the button remap-mode setting.

(1) Touch sensing



Press and hold the Touch sensing area for 5 seconds, the blue light will be on and enter the setting mode.

(2) L1 + R1 + Down + X



Press and hold the combination button for 5 seconds, the blue light will be on and enter the setting mode.

3. After entering the setting mode the blue light will stay on. You can remap any 15 buttons to K1 and K2 buttons.

Remap Buttons:



Back buttons K1, K2:

Example:



Press and hold the back buttons + any PS4 function button for 3 seconds. The blue light will blink for 3 times and stay on.



Button K2 + O Press and hold for 3 seconds, blue light flashes for 3 times and then stay on.

4. Exit the button setting mode after the setting is completed. In the setup mode, the back buttons are not valid.

(1) Touch sensing position



Press and hold the Touch sensing button for 5 seconds, the blue light turns off and exits the setting mode.

(2) L1 + R1 + Down + X



Press and hold the combination button for 5 seconds, the blue light turns off and exits the setting mode.

5. Cancel function button already set.

If you want to cancel the back buttons function, entering the setting mode firstly, then press and hold the function button already set, then press and hold button for 3 seconds, the blue light will turn red flashing for 3 times and then blue light indicated and stay on.

Example: (1) O + Button K2



O + Button K4 long press for 3 seconds, indicate light turns red, light flashes 3 times and then and then blue light indicated and stay on.

6. Cancel all back buttons already set.

UP + LEFT + TRIANGLE + O + L1 + R1 Press and hold the combination buttons for 5 seconds, the indicate light will turn red and flash for 3 times and then blue light indicated and stay on. All the back buttons are canceled successfully.



— 21 —

### 7. FlashShot Trigger Stop Operation Tips

Upward move the FlashShot Trigger Stop switch, the FlashShot Trigger Stop turns on, the buttons function as a short trip.  
Downward move the FlashShot Trigger Stop switch, the FlashShot Trigger Stop turns off, the buttons back to normal.

short trip



Long trip



— 22 —