

# OPERATION INSTRUCTIONS


Functions Introduction:  
Remap any buttons

Add maximum six additional buttons and map them to any button on your PS4 Controller. You can re-map 15 buttons on the controller:

Dpad: Up, Down, Left, Right.      Top Buttons: L1, R1, L2, R2




Front Buttons: X, Circle, Square, triangle, L3, R3, Touchpad

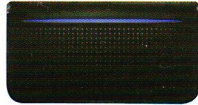


- (1) A back button can only remap one function button.
- (2) One function button can be remapped to several back buttons.

## ENTER & EXIT SETTING MODE

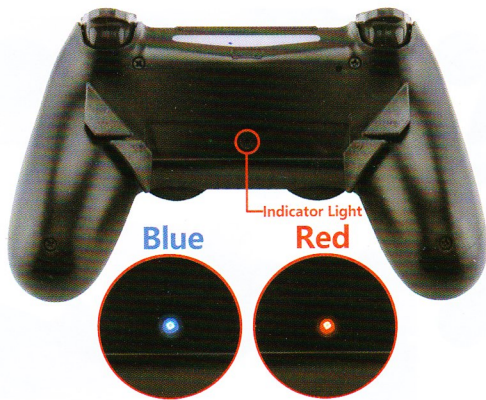

- 1. Turn on the gamepad and connect it to the console.
- 2. Two ways entering the button remap-mode setting.

(1) Touch sensing

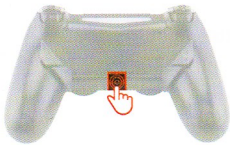

Press and hold the Touch sensing area for 5 seconds, the blue light will be on and enter the setting mode.


(2) L1 + R1 + Down + X



Press and hold the combination button for 5 seconds, the blue light will be on and enter the setting mode.

- 3. After entering the setting mode the blue light will stay on. You can remap any 15 buttons to K1 and K4 buttons.

Remap Buttons:

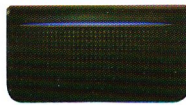

## 5. Cancel function button already set.

If you want to cancel the back buttons function, entering the setting mode firstly, then press and hold the function button already set, then press and hold button for 3 seconds, the blue light will turn red flashing for 3 times and then blue light indicated and stay on.

**Example:** (1) O + Button K4



O +Button K4 long press for 3 seconds, indicate light turns red, light flashes 3 times and then and then blue light indicated and stay on.

## 6. Cancel all back buttons already set.

UP + LEFT + TRIANGLE + O + L1 + R1  
Press and hold the combination buttons for 5 seconds, the indicate light will turn red and flash for 3 times and then blue light indicated and stay on. All the back buttons are canceled successfully.

